

Top Quality Portable Bars - bestportablebars.com

DELUX Portable Bar Manual

IMPORTANT: Warnings and Cautions

Metal edges and corners could be sharp. One should use protection gloves while manipulating the bar or any metal parts. Also, avoid wearing new clothes or jewelry while assembling/disassembling/moving the bar.

Some parts can be too heavy or too large to be lifted and carried by one person alone. If unsure about your ability to lift and manipulate a part by yourself, ask for others' help. Avoid lifting and manipulating the bar parts in proximity to children or pets.

Place the bar in a safe place to avoid accidents.

Although the bar and lighting are made to resist to unexpected spills and rain, keep the bar top, controller, and electric connections safe from direct spill, water, and rain.

Important Warranty Information

BEST portable bars come with a limited warranty of one year after the date of purchase against manufacturing defects. Damages resulting from shipping, handling, misuse, bad maintenance, negligence, or any other factor that cannot be controlled by Avec Flair Bar Solutions Inc. are not covered by this warranty.

Maintenance Information

Although the DELUX bar is made of food-grade type 304 stainless steel, which is very resistant to rust, it is recommended to always keep it as clean and dry as possible, both when used and in storage. Avoid long exposure to citrus juice, salt water, and other rust activators.

For cleaning purposes, we recommend using white vinegar. If you are going to use commercial detergents, use products specifically made for stainless steel. Other commonly known and widely available products that you may use are Windex, Extra Virgin Olive Oil, and Baby Oil. Always use a soft cotton cloth to clean a stainless steel surface.

To eliminate scratches, try brushing the scratched area with steel wool. Brush gently in the direction of the grain.


How to Set Up the DELUX

Not fond of assembly instructions? There's also a simple video showing how to assemble the DELUX bar on our website at <u>https://bestportablebars.com/product/delux-portable-bar/</u>

Remove lock pins (Picture 1a) and open both sides of the bar all the way to a 90-degree angle (Picture 1b).




Picture 1a. Remove the lock pins.

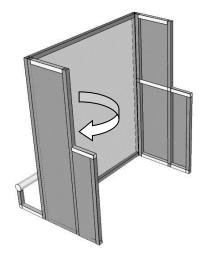


Picture 1b. Open both sides of the bar.

2. Always put the lock pins back in place with the clips on to reduce the risk of losing them. When you do, make sure to always insert the straight side of the clip into the lock pin's hole (Picture 2). The clip could be difficult to remove if the curved side is inserted. Make sure you install them on the tabs inside the bar, as shown on Picture 1a. If you install them on the tabs on both sides of the bar, they will be in the way when comes the time to install the bar top.

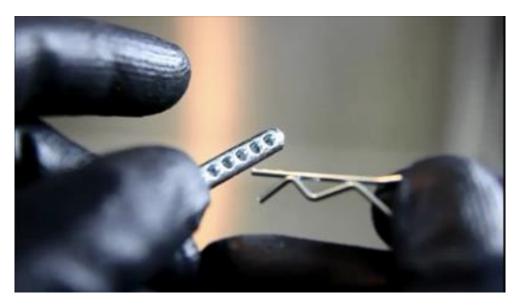

Picture 2. Always insert the straight side of the clip into the lock pin's hole.

3. Install the shelf. You will see inserts on both sides of the bar (Picture 3a). Lay the shelf on the inserts, make sure it locks in, and then push the shelf all the way to the back of the bar (Picture 3b). If you purchased an extra bottom shelf, install it now using the same method.

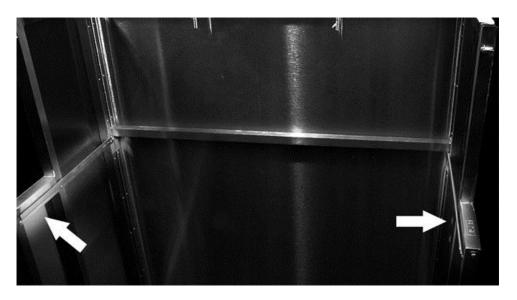

Picture 3a. Shelf inserts on both sides of the bar.



Picture 3b. Secure shelf into the inserts, then slide it all the way to the back of the bar.

4. If you purchased the DELUX model with integrated sink or ice bin (Picture 4), gently drop it in the shelf hole. Discard this step if you purchased the model with a plain top shelf.



Picture 4. Gently drop the sink or ice bin in the top shelf hole. Ice bin shown here.

5. Install the Speed Rail. Insert the fixed screws on both sides of the frame into the slots on both sides of the speed rail (Picture 5). Proceed with one side at a time. Make sure they are both secure and all the way in. The speed rail should be flush with the top shelf.



Picture 5. Install the speed rail using the slots on both sides.

6. Install the Bar Top. We recommend having two people for this operation. The tabs on both sides of the frame (Picture 6a) should be inside the bar top's edge (Picture 6b) in order to secure it. First lift the top up on the frame (Picture 6c) until you reach the tabs, then rotate the top toward a flat position while keeping the tabs inside the top. In the process, make sure the top is aligned so that the frame fits perfectly into the Smart Positioning Guides (Picture 6d). Once you are done, double-check one last time to make sure the top is well-inserted in the Smart Positioning Guides and that the tabs really are inside the top (Picture 6e). This is important; tabs prevent the top from flipping if someone puts all his on her weight on the front of the bar.




Picture 6a. These tabs on the sides will secure the bar top in place. Place them inside the bar top first.



Picture 6b. Tabs inside the bar top's bottom edge.



Picture 6c. Lift the top up on the frame until you reach the tabs, then rotate the top toward a flat position while keeping the tabs inside the top.

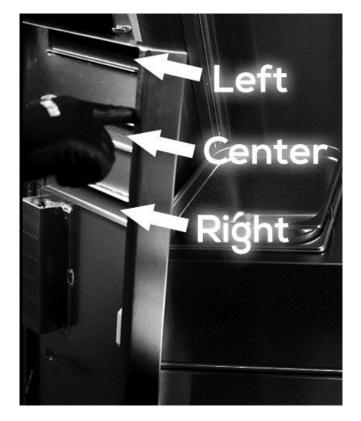


Picture 6d. Align the structure's sides with the Smart Positioning Guides.




Picture 6e. Once the bar top is installed, the tabs should be inside.

The following steps are for the 3D holographic lighting system. If your DELUX doesn't have the lights option, you're already done. It's time to start serving drinks!

7. Plug in the lights. Pass the adapter's cable through the hole on the side of the shelf, pull it to the front of the bar, and plug it into the short cable coming out of the bar top (Picture 7a). Turn the cable a few times around the lock pin to secure it out of the way (Picture 7b).

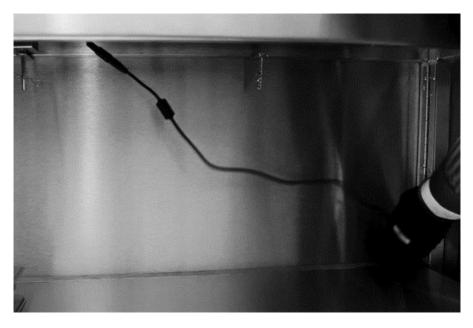

Picture 7a. Pass the power adapter cable through side and plug in underneath the top.

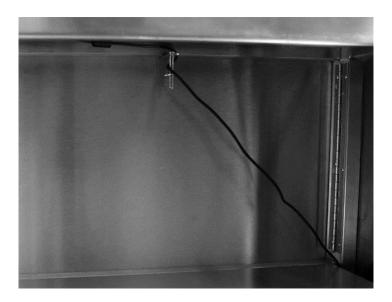

Picture 7b. Turn the cable a few times around the lock pin to secure it.

8. Turn on the lights. The front lights (on/off, color selection, brightness, transition mode, and speed) are controlled with the remote control. There's a support for it inside the bar (Picture 8a). There are also lights inside the bar to make it easier to work when it's dark. They are white LED, controlled by a dimmer hidden underneath the top (Picture 8b).



Picture 8a. Remote control for the front lights.



Picture 8b. Hidden dimmer for interior light.

Using the Remote Control

Power On/Off: Hold the power button a few seconds to turn the lights on or off.

Sleep Mode: In order to save battery power, the remote automatically enters sleep mode after a short period without activity. To exit sleep mode, tap the power button once.

White Selection: Unless the remote is in sleep mode, a quick tap on the power button will select a white. Keep tapping in order to loop through warmer and colder whites.

Selecting a color: Select a color using the color wheel.

Looping Through Colors: Press the Play button to loop through colors while controlling the speed with the S-/S+ buttons.

Brightness: B-/B+ control the brightness.

Controlling Multiple Bars: If you purchased all your bars at once, the 1 button will control them all by default—you don't have to do anything. The 1 and 2 buttons can, however, be reprogrammed in order to control two bars separately. In order to do so, please consult the remote control's manual.